




## HONDA IMMO EMULATOR

White diode – power


Blue diode – after adjusting it lights constantly and blinks every other second

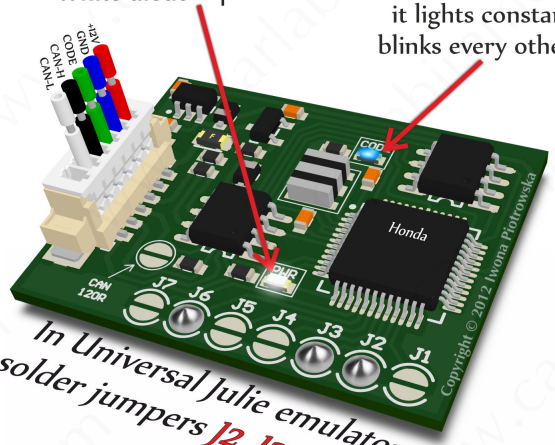


In Universal Julie emulator solder jumpers **J2, J3 and J6**

## Use


**Honda: Accord, CRV, Civic and other  
(production year 1999 - 2002)**

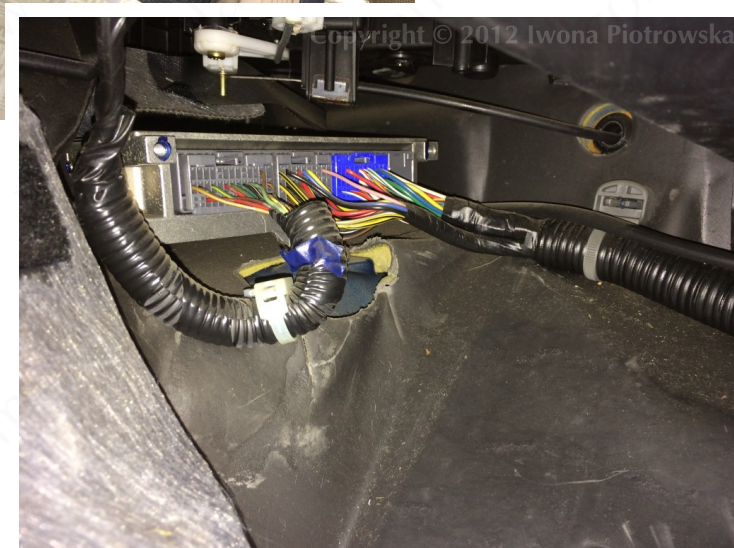

The emulator only works with ECU that has got immo board equipped with 26-pin processor with a label

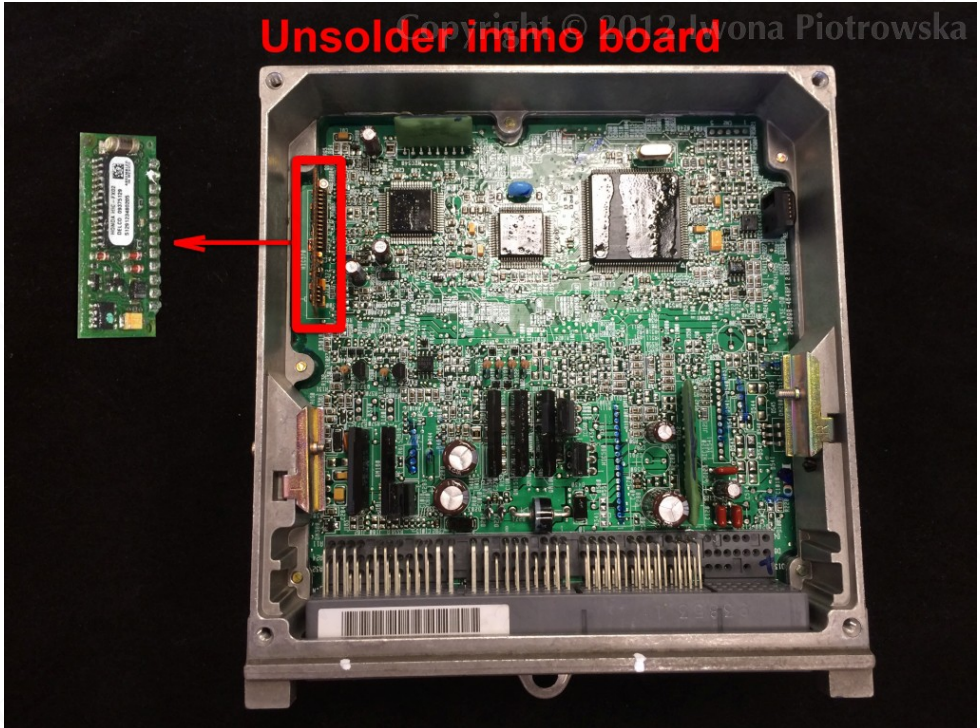


Unsolder this immo board as shown in the picture above

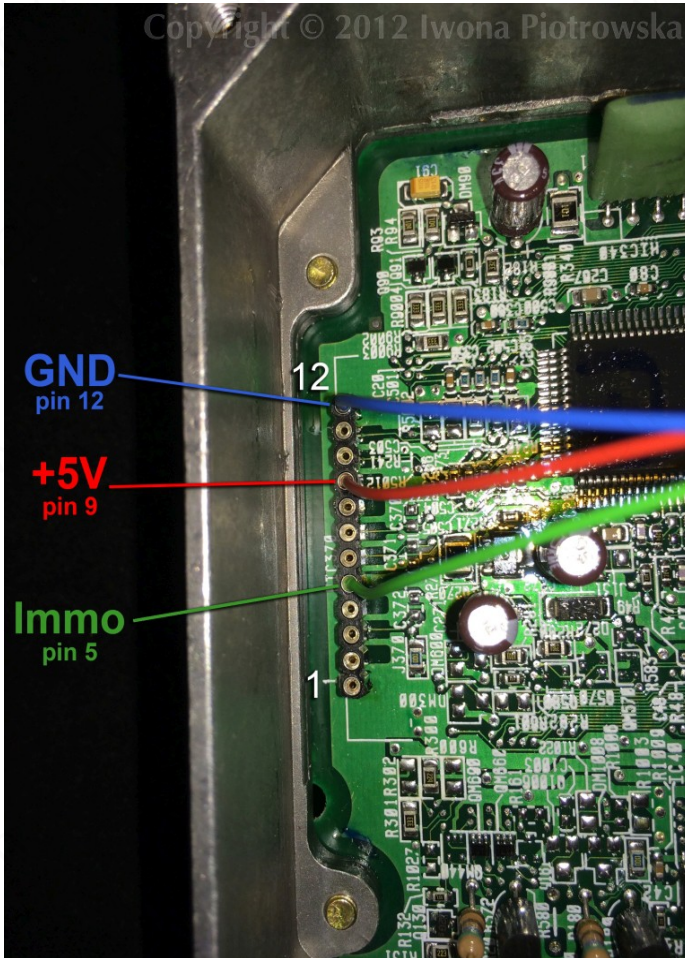


In the place of the immo board, solder in the emulator




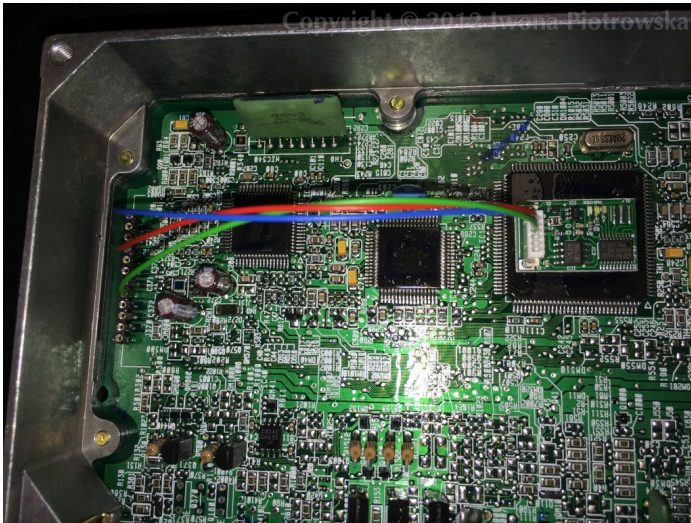


Example connection diagram of Honda emulator

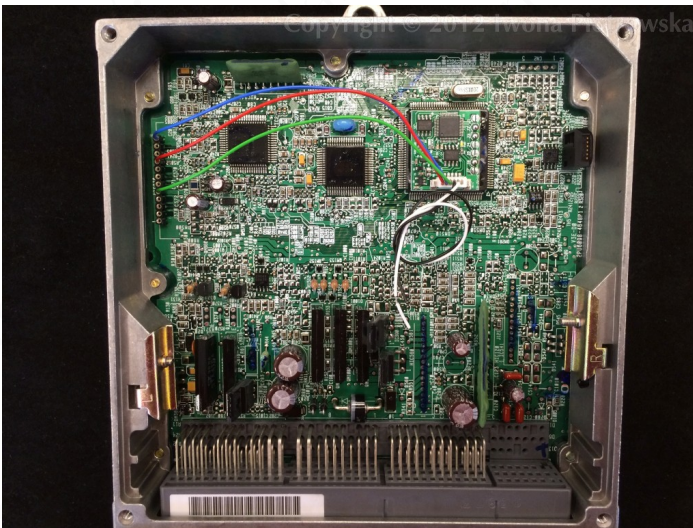

Example connection diagram of Universal Julie emulator

Before starting the car, disconnect the plug from immo box!!!

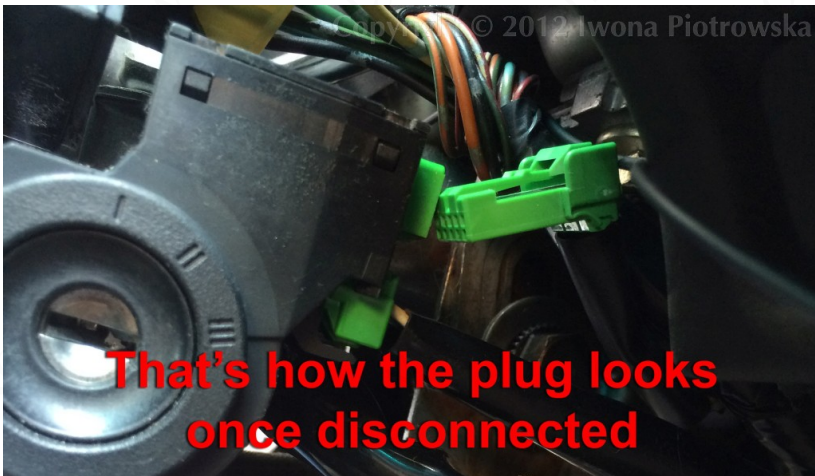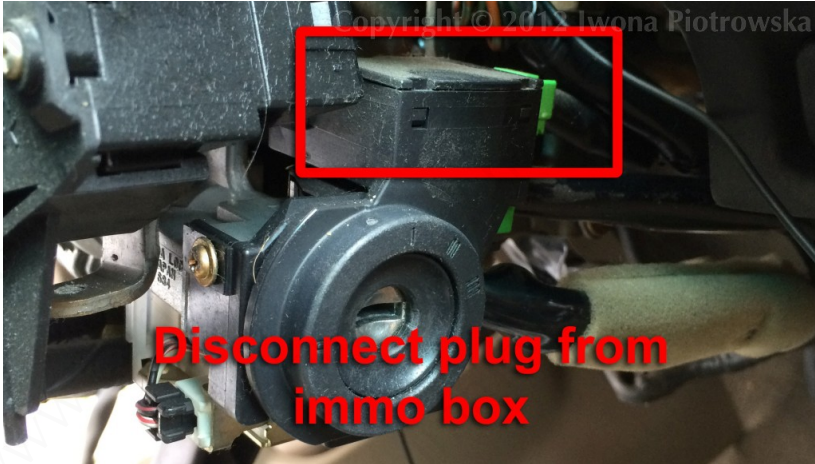

### **Warning!!!**

Due to possible construction changes of cars, check signals with multimeter in the ECU plug.

**We state that we are the only authentic authors of this manual. We possess copyright of this publication. All rights reserved. Unauthorized copying, hiring, lending, public performance will be punished!!! Any trials of unauthorized copying, hiring, quoting prohibited!!! Both service and advertisement constitute copyright and they are the subject to the protection in accordance with the Act from 4<sup>th</sup> Feb. 1994 on Copyright and Related Laws (Statute Book no. 24 position 93) and protection on the basis of the Act from 8<sup>th</sup> June 1993 on combating an unfair competition (Statute Book no. 47 position 211)**

**[www.carlabimmo.com](http://www.carlabimmo.com)**

**Last updated 25.09.2014**